





## Parts List for DCS374B Type 1

Item Number	Part Number	Description	Qty Required
1	N422502	O-RING	1
2	330045-17	SCREW	2
3	330045-15	SCREW	6
4	N421115	SHROUD FRONT	1
5	652853-00	ROD	2
6	330019-74	SCREW	2
7	N427790	TENSION BOLT	2
8	N429228	HANDLE ASSEMBLY	1
9	638064-00	LOCK WASHER	2
10	N450122	MOTOR & SWITCH ASSY.	1
11	N071836	ROLL PIN	1
12	N413576	AIR TUBE	1
13	330065-05	SCREW	1
14	N400495	LOCK OFF BUTTON	1
15	N427279	HOUSING ASSEMBLY	1
16	654622-00	BLADE INSERT	1
18	682211-00	SCREW PLASTITE	5
19	330019-14	SCREW	6
20	N410778	SPEED DIAL	1
21	N404513	PLATE	1
22	650732-00	PIN	2
24	N458857	LEVER	1
25	651756-00	SHAFT	1
26	330045-45	SCREW	4
27	658553-00	HEX WRENCH	1
28	656970-00	KNOB	1
29	657027-00	WASHER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.

## Parts List for DCS374B Type 1

Item Number	Part Number	Description	Qty Required
30	650957-00	BAIL HANDLE	1
31	655185-00	CARRIAGE BOLT	1
32	330045-44	SCREW	8
33	N404436	SHROUD COVER	1
34	651749-00	YOKE	1
35	N242699	SCREW	3
36	660104-00	SLEEVE BEARING	3
37	330024-52	SCREW	1
38	330016-03	WASHER,PLAIN	1
39	651748-00	SUPPORT PLATE	1
40	037653-00	RING, RETAINING	1
41	803679	PLASTIC WASHER	1
42	656999-00	SHAFT	1
43	330016-21	WASHER	1
44	656922-00	SPACER	1
45	873581	SPRING	2
46	650721-00	TIRE	2
48	N458860	FRONT WHEEL	1
49	803435	WASHER	2
50	863134	WASHER	2
51	330024-51	SCREW	2
52	N414348	COVER	1
53	N401707	LED ASSY	1
54	330019-01	SCREW PLASTITE	1
55	653513-00	SCREW	1
56	330015-12	NUT	1
57	N418174	SPACER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.

## Parts List for DCS374B Type 1

Item Number	Part Number	Description	Qty Required
58	N407055	SPACER	1
59	N392972	ROLL PIN	4
60	N448267	BEARING BLOCK	2
61	605040-66	BALL BEARING	2
62	605040-65	BALL BEARING	8
63	N447838	WASHER	4
64	650736-00	SHOULDER BOLT	4
65	N420010	SHROUD REAR	1
66	330004-27	NEEDLE BEARING	2
68	N422503	O-RING	1
69	N419842	DUSTING BRUSH	1
70	N423878	COVER, BRUSH	1
71	098091-10	SCREW	2
72	N454810	GEAR & SHAFT	1
74	N454811	GEAR & CASE ASY	1
79	330045-49	SCREW	4
80	N439121	O-RING	1
82	N454812	BEVEL GEAR ASSY	1
83	660010-00	SCREW	2
84	650716-00	SHOE	1
85	659418-00	BLOCK	1
86	N404437	SHROUD COVER	1
87	651744-00	HOOK	1
88	330045-13	SCREW, TAPTITE	2
91	N413634	REAR WHEEL	1
100	N439412	RATING LABEL	1
101	N439798	LABEL	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.

## Parts List for DCS374B Type 1

Item Number	Part Number	Description	Qty Required
102	N439800	ID LABEL	1
103	N454124	LABEL	1
856	45277-1	BAND SAW BLADE	1
861	N438254	KITBOX	1
866	DCB205	BATTERY PACK	2
871	DCB101	CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.