





Parts Breakdown

JR3000V

Products with multiple versions are listed in subsiding order with the newest version on top not indented

<u>Fig #</u>	<u>Part ID</u>	<u>Part Name</u>	<u>Quantity</u>
1	911241-2	P.H. SCREW M5X25, 9005B	4
2	316486-1	N/A	1
2	317503-0	GEAR HOUSING COVER, JR3000V	1
3	155896-5	SEAL, JR3000V	1
5	214167-0	PLANE BEARING 12.7, JR3000V, T2	1
6	341462-6	PLATE, JR3000V	1
7	911225-0	PAN HEAD SCREW M5X16, JR3050T	2
8	163340-8	SLIDER, JR3000V, T2	1
8	163357-1	SLIDER, JR3000V, T3	1
8	163392-9	SLIDER, JR3000V, T4	1
9	212001-8	N. BEARING 708, JR3000V	1
10	253816-4	F. WASHER 6, JR3000V	1
11	212115-3	N. BEARING 1216, JR3000V	1
12	133244-8	GEAR JR3000 (TYPE 1)	1
13	251372-8	C.SCREW M5X12, 9035, 9035SB	1
13	251969-3	C.H. BOLT M5X12, JR3020	1
14	253805-9	F. WASHER 18, JR3000V	1
16	321263-8	GEAR SHAFT, JR3000V	1
17	421162-5	SPACE BLOCK, JR3000V, T1	1
18	214157-3	P. BEARING 12.7, JR3000V, T1	1
18	214166-2	PLANE BEARING 12.7 JR3000V-T1	1
18	214167-0	PLANE BEARING 12.7, JR3000V, T2	1
19	341462-6	PLATE, JR3000V	1
19	343526-2	PLATE, JR3000V	1
20	911225-0	PAN HEAD SCREW M5X16, JR3050T	2
21	266012-5	TAPPING SCREW 5X35, HR160DH	2
21	911251-9	P.H. SCREW M5X30, 2040	2
22	152924-7	GEAR HOUSING COMPLETE, JR300V	1
22	159593-5	GEAR HOUSING CPL., JR3000V	1
23	251295-0	F.H. SCREW M4X14, 3612BRA	2
23	912122-3	C.S.H SCREW M4X14, 5005BA	2
24	285650-4	BEARING RETAINER 54, JR3000V	1
25	211087-9	B. BEARING 6200DDW, JR3000V	1
26	961006-2	RETAINING RING S-10, N9501B	1
27	911215-3	PAN HEAD SCREW M4X10, JR3000VT	3
28	266012-5	TAPPING SCREW 5X35, HR160DH	2
28	911256-9	P.H. SCREW M5X35, 6300LR	2
29	421476-2	INSULATION COVER, JR3000V	1
29	421801-7	INSULATION COVER, JR3000V	1
31	265836-6	SET SCREW M8X9, JR3000V	1
32	313067-2	BLADE CLAMP, JR3000V (T3)	1
32	313075-3	BLADE CLAMP, JR3020	1
32	322502-9	BLADE CLAMP, JR3000V, T2	1
33	163258-3	SHOE, JR3000V	1
34	941101-4	F. WASHER 5, JR3000V	2
36	922216-6	H.S.H. BOLT M5X14, 5077B	2
37	516161-1	ARMATURE ASS'Y	1
37	516456-2	ARMATURE ASSEMBLY, JR3000V	1
38	411612-8	BAFFLE PLATE, JR3000V	1
38	417613-4	BAFFLE PLATE, JR3000VT	1
39	681613-2	INS. WASHER, JN3200	1
40	211033-2	B. BEARING 608LB, 5091D	1
41	253192-6	F. WASHER 14, HR2400	1
42	594161-1	FIELD ASS'Y, JR3000VT	1
42	594416-4	FIELD ASSEMBLY, JR300VT	1
43	854810-5	NAME PLATE, JR3000V	1
45	150900-5	MOTOR HOUSING ASS'Y, JR3000V-T2	1
45	151986-2	MOTOR HOUSING CPL., JR3000VT	1
45	183351-7	MOTOR HOUSING CPL., JR3000V	1
46	664064-4	CORD (2X18X8 SJ), HR2400	1
47	682502-4	CORD GUARD 8-85, HP2010N	1
48	687063-9	STRAIN RELIEF, 4323K	1
49	265995-6	TAPPING SCREW 4X18, 4323K	2
52	265999-8	TAPPING SCREW M4X25, HM1800	4



Parts Breakdown

JR3000V

53	415240-1	HANDLE COVER, JR3000V,T2	1
53	417611-8	HANDLE COVER, JR3000VT	1
55	265995-6	TAPPING SCREW 4X18, 4323K	2
56	191956-9	CARBON BRUSH 75, JR3000V	1
56	194971-2	CARBON BRUSH SET CB-75, JR3000V	1
57	643551-6	BRUSH HOLDER, JR3000V	2
58	650206-6	SWITCH, JR3000V	1
58	651271-8	SWITCH, JR3000V	1
58	651271-8	SWITCH, JR3000V	1
59	411852-8	SWITCH COVER, 6805BV	1
61	266044-2	T. SCREW FLANGE 5X60, 5037NB	2
61	266095-5	TAPPING SCREW 5X55, KP0810	2
62	241631-8	FAN, JR3000V	1
63	258018-7	SPRING PIN 2.5-9, JR3000V-T2	1
65	263002-9	RUBBER PIN 4, HR2400	1
66	443070-0	FELT PAD, JR3000V	1
67	443070-0	FELT PAD, JR3000V	1
68	256701-0	PIN 3, JR3000V,T1	1
70	265986-7	H.S. BOLT M5X13, JR3000V,T1	1
70	266090-5	H.S.H.SCREW M5X15, JR3000V-T2	1
71	343981-8	PLATE (C), JR3030	1
72	251969-3	C.H. BOLT M5X12, JR3020	2
400	192342-7	RECIPRO SAW BLADE SET	1
400	193572-3	RECIPRO SAW BLADE SET	1
403	783202-0	HEX WRENCH 4, JR3000V	1
404	410048-8	WRENCH HOLDER, JR3000V	1
405	824412-1	PLASTIC TOOL CASE, JR3000V	1
405	824539-7	PLASTIC TOOL CASE, JR3000VT	1
902	343657-7	RETAINER, JR3000V	2